

COVERTRIM

By Ornamental Decorative Millwork



CoverTrim is the perfect solution for refreshing outdated trim mouldings or for those home improvement projects that require new flooring, wall paper, or paint without requiring additional mouldings like quarter round or shoe mould. Designed to install directly over top of your existing mouldings, there is no need to carefully edge new paint or wallpaper applications; your new CoverTrim mouldings will hide it all!

PRIMED AND READY
TO PAINT

COVERS EXISTING TRIM

EASY INSTALLATION WITH
TRANSITION BLOCKS



Craftsman Base shown above


Block Installation			
1	2	3	4
Install Cover Trim blocks and transitions	Measure and cut moulding to fit between blocks and transitions	Place Spacers as needed and nail moulding in place	Cut existing moulding to the width of the block. Block should fit flush against the wall.

Mitered Installation			
1	2	3	4
Measure Cover Trim to fit the opening	Miter the corners	Place Spacers as needed and nail moulding in place	Caulk and paint seams as desired.


Colonial Base 1541-8FTMDF




Transition Blocks 1665PBMDf

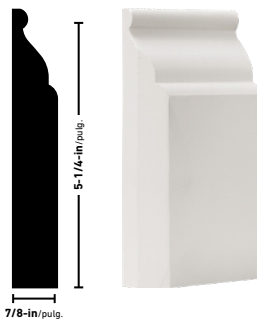

Colonial CoverTrim Crown 1540-8FTMDF

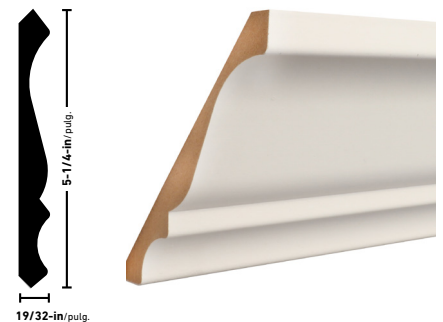

Craftsman Base 1542-8FTMDF

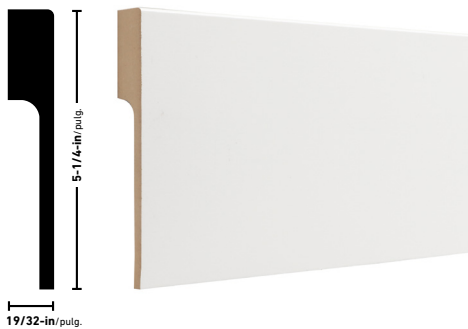

Transition Blocks 1664PBMDf



Spacer SPACERCOVERTRIM

Don't forget spacers to make base installation easier.



Base Profiles: Covers existing base up to 9/16-in thick x 3-1/2-in tall for existing base with a curve or 3-1/4-in tall for existing square base.

Plinth Block: Can be used with casing under 7/8-in thick.

Crown: Covers existing crown up to 3-5/8-in.